Garden Speakers

ROCK-SHAPED OUTDOOR SPEAKERS


8" Woofer + Tweeter | 100V Line / 8 ohm - up to 30W | 50 Hz - 20 kHz

TECHNICAL DATASHEET

English | Reference edition v1.0

Aura.eg

Branded reference copy - MR 110 G LINE / MR 110 S LINE

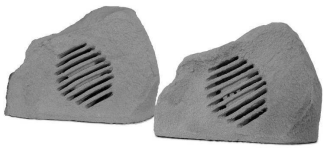

CAUTION!!
Please read this user manual carefully before you start-up or operating it.

Every person involved with the installation, operation and maintenance of this device have to:
-Be qualified
-Follow the instructions of this manual

INTRODUCTION

Thank you for having chosen this garden speaker. This device is ideal for liven up a garden thanks to its shape simulating a rock.

Unpack your loudspeaker

Before your initial start-up, please make sure that there is no damage caused by transportation. Should the re be any, consult your dealer and do not use the device.

SAFETY INSTRUCTIONS

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

Important: Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to drastic temperature fluctuation (e.g. After transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

endanger your own and the safety of others!

Operate the device only after having familiarized with its functions. Do not allow any operation by persons who do not know the device well enough. Most damages are the result of an unprofessional operation!

Please consider that for safety reasons unauthorized modifications to the device are forbidden!

INSTALLATION INSTRUCTIONS

1. Experiment with the location of your speaker. Once you have determined the location for the best music coverage, place your speaker on firm ground.
2. Run the rubber jacketed cable to your amplifer/receiver by the shortest route. If additional cable is need, we recommended 18/2 rubber jacket cable.
3. Bury the cable at least 4” underground to avoid damage due to regular yard maintenance.
4. Route the cable to stereo speaker outputs. Connect one line to (+) and the other to (-)

FEATURES	MR 110 G LINE	MR 110 S LINE
Elements	8” Woofer + TWT	8” Woofer + TWT
Power	3W/7.5W/15W/30W	3W/7.5W/15W/30W
Impedance	8 ohm/100V line	8 ohm/100V line
Sensitivity	89 dB	89 dB
Crossfader frequency	4.5K ohm	4.5K ohm
Frequency Response	50 Hz - 20000 Hz	50 Hz - 20000 Hz
Dimensions	400x300x230 mm	400x300x230 mm
Weight	5.4 Kg	5.4 Kg

Aura.eg